

# DeGAS - C

## Coldwater Column Deaeration System



# DeGas - Cold

## The Principle

Structured packing typically consists of thin corrugated metal plates arranged in a way that they force liquids to take multiple paths through the column, thereby creating a large surface area for contact between different phases. The cold water passes the column in a counter current flow top-down to the strip gas CO<sub>2</sub>. The oxygen will leave the column at its top together with the not dissolved CO<sub>2</sub> to the vent.

A column discharge pump forwards the water from the bottom of column to the DAW process. The integration of an UV-Disinfection System provides sterile water for food processing. An optional inline oxygen measurement determine the proper function continuously to ensure stable conditions.

### Technical Data

Capacity	10 - 1500 hl/h
Residual Oxygen	< 10 ppb
Temperature	4 - 95°C
Pressure	0-8 bar
Material	1.4301 / 1.4404
Cooling media	Glycol, Brine, Ice water, Ammonia
PLC	Siematic S7

- **Optional Inline Oxygen Measurement**  
Determine highly accurate and continuously the residual Oxygen content by using the Centec optical process measurement **Oxytrans TR**
- **Optional Process Visualisation**  
Visualize and store continuously the process on the local PLC or at an upper SCADA System.



- **Energy-Saving**

by deaeration of the water at ambient temperature

- **Hygienic**


by integration of an UV-System and fully integrated in the CIP process

- **Flexible**

by using a local PLC or fully integrated in the overall process

- **Reliable in Operation**

fully monitored and controlled by an inline oxygen measurement

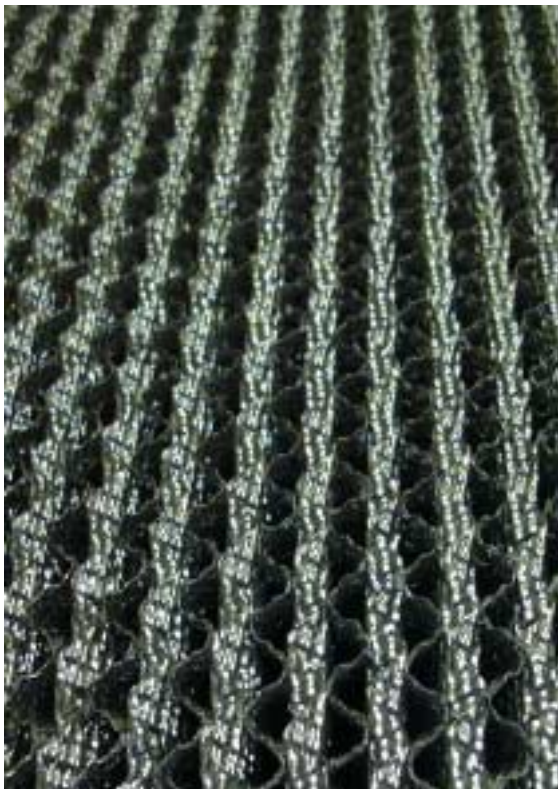

Structured Packing



Centec OXYTRANS-TR  
Optical Inline Oxygen Measurement

Unsere weltweiten Partner für Vertrieb und Service  
Our worldwide partners for sales and service  
[www.centec.de](http://www.centec.de)

Centec Germany (Hauptsitz/Headquarter)  
Centec Gesellschaft für Labor-  
und Prozessmesstechnik mbH  
Wilhelm-Röntgen-Str. 10  
D-63477 Maintal / Frankfurt  
Tel +49 (0) 6181 1878 0  
Fax +49 (0) 6181 1878 50  
[info@centec.de](mailto:info@centec.de)  
[www.centec.de](http://www.centec.de)



Centec Czech Republic  
Centec automatika spol  
s.r.o.  
Pekarská 8  
CZ-15500 Praha  
Tel.: +420 257 084 111  
Fax: +420 235 518 701

Centec USA  
Centec LLC  
P.O. Box 820  
Germantown,  
WI 53022-0820  
Tel.: +1-262 251-8209  
Fax: +1-262 251-8376

Centec Brasil  
Centec América Latina  
Av. das Américas, 500 Bl  
13/313  
22640-100 Rio de Janeiro,  
Tel./Fax:  
+55 21 2494 5849

Centec Serbia  
Centec Predstavništvo  
u Beogradu  
Bogdana Zerajica 34  
11090 Belgrad, Srbija  
Tel./Fax:  
+381 11 358 11 24